 


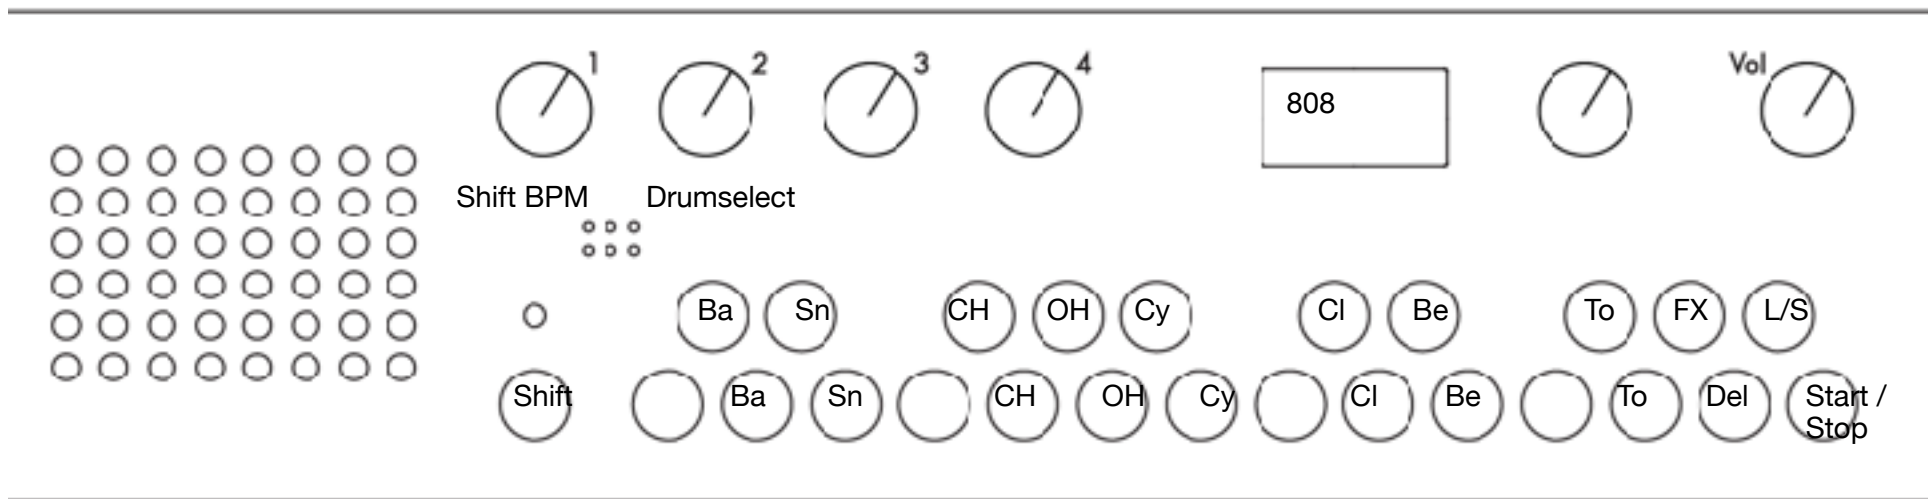


808 has 8 drums that each have distortion and then have sends to delay and a master reverb. The hats share an fx send, so do the bells, clap and toms. The FX page allows changes to the delay setting. Each drum has a drum setting page (top row) with an FX send page below.


Shift knob 1 is bmp. Shift last key starts and stops. Shift to select pages.

L/S saves the drum sounds, not the sequence currently

 Twist encoder to select 303 page.

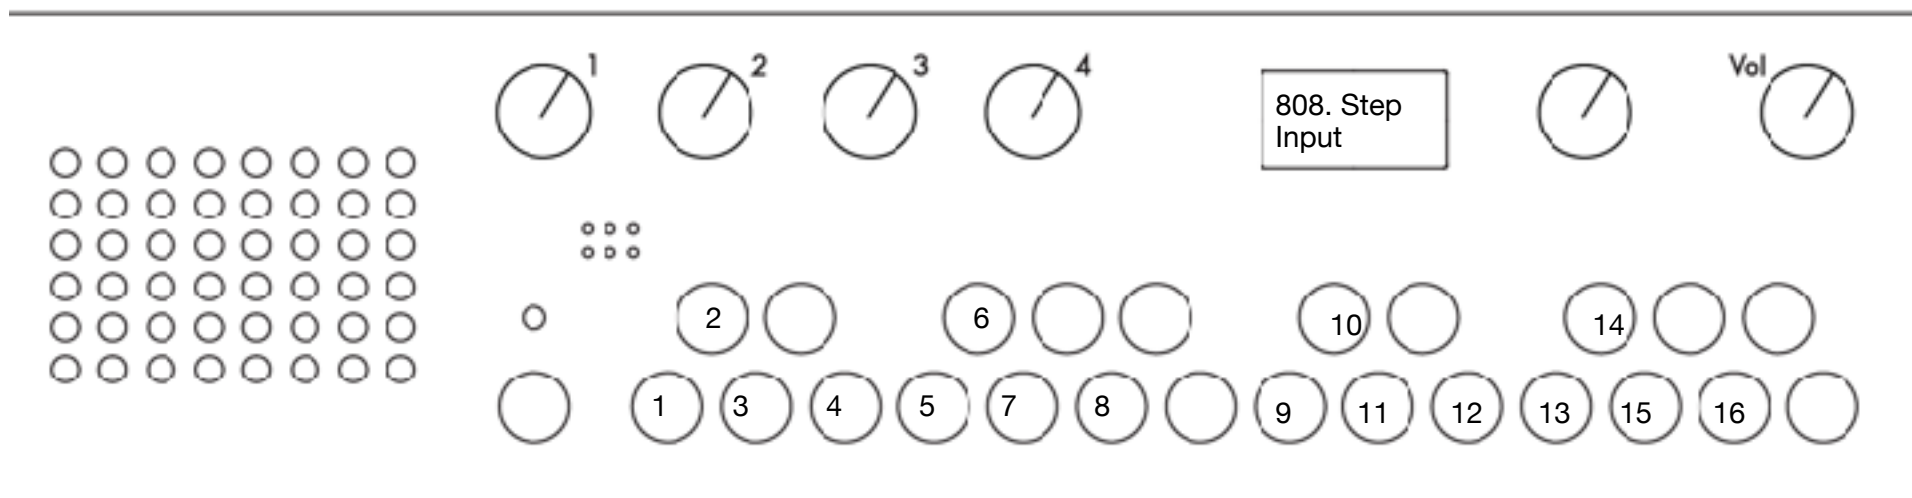

Select your drum or drum page and hit a key to play that drum on that step.

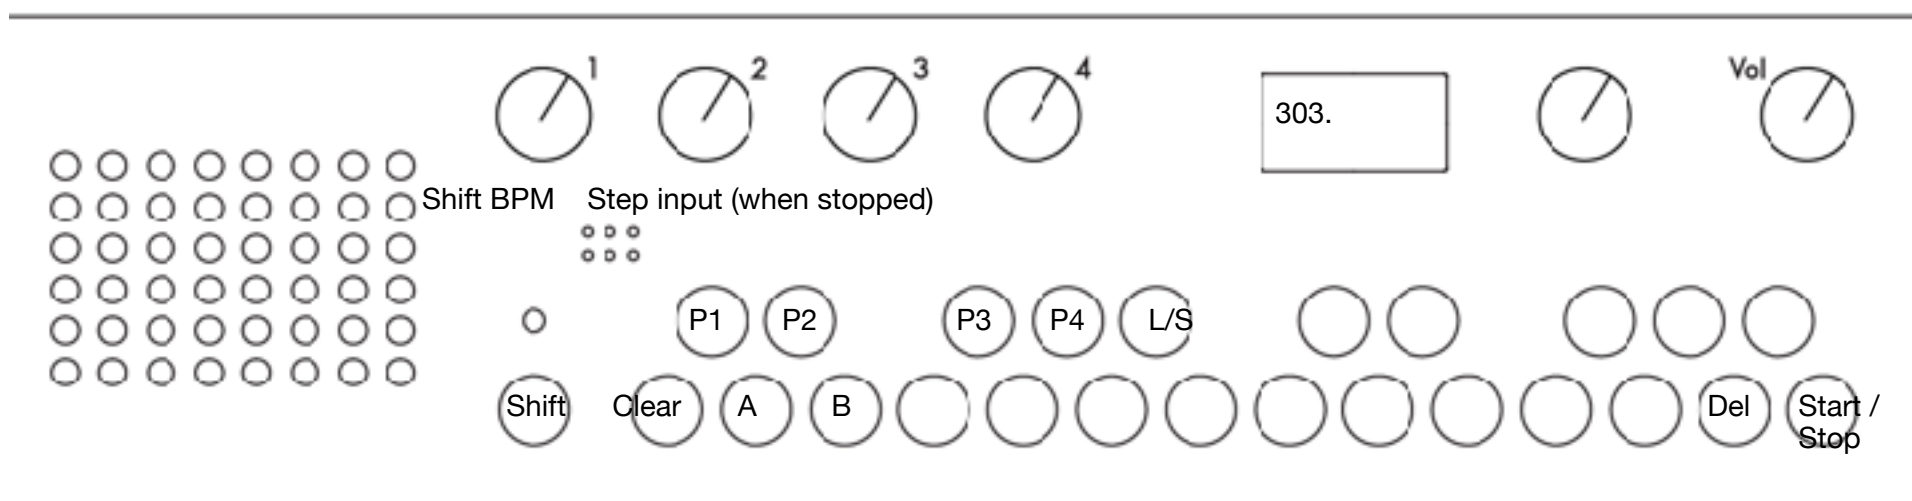

303. Shift keys to select pages.

P1 volume and filters. P2 AR, length and wave. P3 FX send. P4 FX settings. P5 load / save of sequence

Hit keys as the sequence plays to enter notes. If you press it too early you can clear your step Shift > Low C.

Or try step sequence mode. Stop the sequence to enable. Use shift > knob2 to move the cursor and press a key to input.

Shift> Low D selects sequence A. Shift> Low E is sequence B. They start playing when the current sequence ends.

Del clears the sequences entirely.

Twist the encoder to go back to Drums.